H345 TOP PIVOT
PIVOT SHOWN ENGAGED

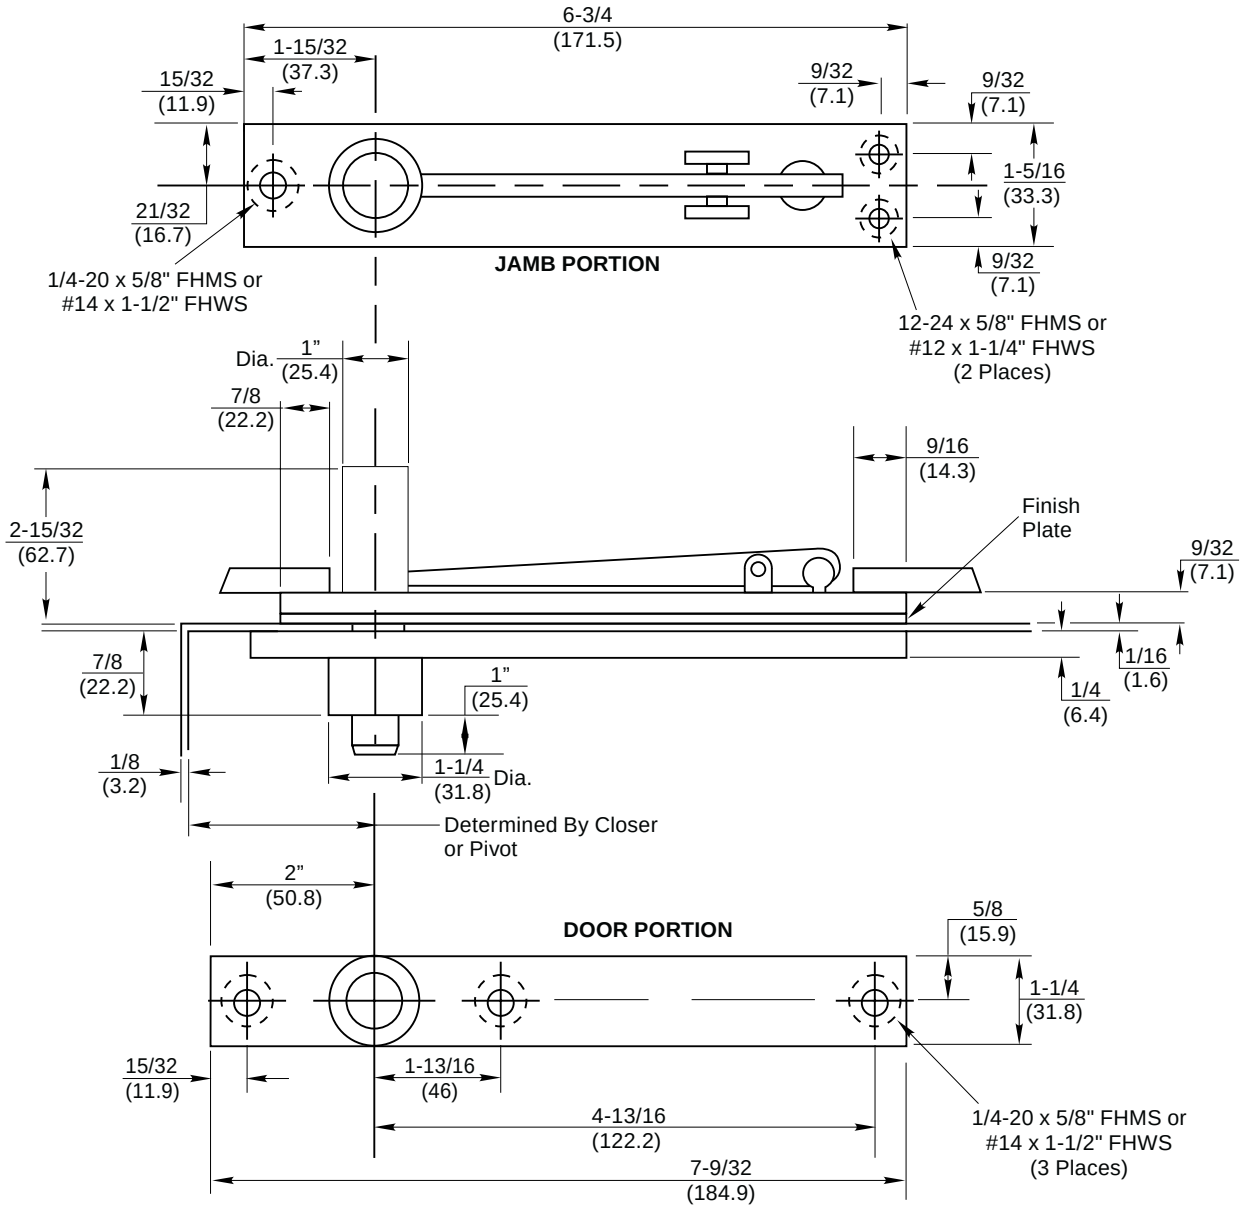

Notes:
1. Do not scale drawing.
2. All dimensions are in inches.

Installation Instructions:
1. Prepare door and frame per details shown.
2. To insure proper operation of door, the centerline of the top pivot pin must be straight and plumb with bottom spindle.
3. Install jamb portion with pin retracted.
4. Install door portion.
5. Place door on bottom pivot and raise door to vertical position.
6. Engage top pivot pin by turning adjusting screw clockwise when door portion is in alignment with the jamb portion.

Top Pivot
H345
Center Hung

RIXSON™
Rixson Specialty Door Controls
www.rixson.com
TEMPLATE NUMBER **IS-H345**
DATE **11-04**